



**NOKIA**  
E71x

# Getting Started Guide



at&t

# Contents

<b>Welcome to AT&amp;T</b>	<b>5</b>
<b>Set Up Your Nokia E71x</b>	<b>6</b>
Insert the SIM Card & Battery	6
Charge the Battery	7
Insert a Memory Card	8
Get to Know Your Nokia E71x	9
Meet Your Icons	10
Lock Your Phone Keypad	12
Change Your Ringer and Earpiece Volume	13
<b>Use Your Nokia E71x</b>	<b>14</b>
Learn to Navigate & Type	14
Connect to AT&T	16
Make Phone Calls	17
Set Up Voicemail	18
Check Voicemail	18
<b>Internet</b>	<b>19</b>
Browse the Web on MEdia™ Net	19
WLAN	20
Downloadable Fun	21
<b>Email &amp; Messaging</b>	<b>22</b>
Text & MMS Messages	22
Send Text and Multimedia Messages	22
Read Text and MMS Messages	22
Instant Messaging	23
Nokia E71x	

Sign In	23
Add a Contact	24
Personal Email	24
Set Up Xpress Mail	25
Using Xpress Mail	26
Set Up Corporate Email	27
Register Email Accounts	28
Using Mail for Exchange	29
Send and Receive Email	30
<b>Sync Your Phone With Your Computer</b>	<b>31</b>
Transfer Music and Other Files From Your Computer	31
<b>Photos &amp; Videos</b>	<b>33</b>
Take a Photo and Send It	33
Record a Video Clip	34
Picture and Video Options	35
Play a Video Clip	35
Video Share™	35
AT&T Mobile Music	37
Music Player	38
CV-Video	39
AT&T Navigator	40
<b>Tips &amp; Tricks</b>	<b>42</b>
<b>Troubleshooting</b>	<b>44</b>

## What's in the Box?

Thank you for purchasing the Nokia E71x.

Take note of the components in the box, pictured to the right.

To get started, we recommend the following:


- Carefully follow the step-by-step instructions in this guide to set up your Nokia E71x.
- To learn more or if you need help with your Nokia E71x, review the User Guide or visit [att.com/wirelesstutorials](http://att.com/wirelesstutorials).




Nokia E71x



Parental Controls Insert

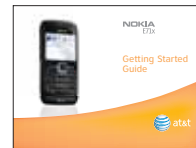

Getting Started Guide

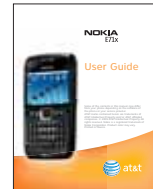

User Guide



1500 mAh Li-Ion Battery



Wall Charger



USB Data Cable

### Insert the SIM Card & Battery

**Caution:** Don't bend or scratch the *Subscriber Identity Module (SIM)* card. Keep it away from static electricity, water and dirt.


Your SIM card contains your phone number and information, such as your list of contacts.



### Charge the Battery

New batteries are precharged, but charging levels may vary.

Plug the battery charger into your phone and an electrical outlet. It might take several seconds for the charging to start.

**When charging is complete**, your display will show a full battery icon . You can't overcharge your battery.



### Insert a Memory Card

You can use a removable microSD card up to 8GB (sold separately) to store music, pictures, videos and other files. You can swap a microSD card without switching the device off. To see the files, select **Home > My Stuff**. The Nokia E71x supports a maximum card size of 8GB.





1. Open the memory slot cover by gently lifting the cover away from the phone. The cover remains attached to the phone.
2. Insert the memory card into its slot. Make sure the contact area is facing the connectors on the device.
3. Put the memory slot cover back in place and push it to close.

**Caution:** Do not remove your memory card while it is being accessed by an operation. Don't bend or scratch your memory card. Keep it away from static electricity, water and dirt.

### Get to Know Your Nokia E71x

#### Turn On Your Device

**To turn on your device**, press and release the Power key . If prompted, enter your password or SIM unlock code.

**To turn off your device**, press and hold the Power key .












**NOTE:** In the event your device freezes up and does not respond for more than 30 seconds, be sure that the battery is fully charged. If it is, remove and replace the battery, then turn the phone back on.




















**Tip:** To change how long your backlight stays on, see “extended battery life” on page XX.

## Meet Your Icons



Status indicators can appear at the top of the idle screen:

1.  – The phone is connected to a UMTS or HSDPA network.
2.  – The phone is connected to a GSM network.
3.  – The phone is in the Offline profile and not connected to a cellular network.
4.  – You have messages in the Inbox folder in Messaging.
5.  – You have new voicemail.
6.  – You have new instant messages (IM).
7.  – You have new email in your remote mailbox.
8.  – You have messages waiting to be sent in Outbox folder.
9.  – You have missed calls.
10.  – Ringing type is set to Vibrate, and the message and email alert tones are turned off.
11.  – The phone keypad is locked.

12.  – An alarm is active.
  13.  – The loudspeaker is activated.
  14.  – All calls to the phone are forwarded to another number.
  15.  or  – A headset or a loopset is connected to the phone.
  16.  or  or  – A GPRS or EGPRS packet data connection is active, the connection is on hold, or a connection is available.
  17.  or  or  – A UMTS packet data connection is active, the connection is on hold, or a connection is available.
  18.  or  or  – A wireless local area network (WLAN) is available, actively connected, or actively connected to an encrypted network.
  19.  or  – Bluetooth connectivity is turned on, or data is being transmitted using Bluetooth technology.
  20.  – A USB data cable connection is active.
- Other indicators may also be displayed.



### Lock Your Phone Keypad

You can manually lock your device to prevent accidental key presses.

To **lock your device**, press the Left selection key , followed by the Function key  within 1.5 seconds.

To **unlock your device**, press **Unlock**, followed by the Function key .

To **change your lock settings**, select **Menu > Settings > Config. > General > Security > Phone and SIM card > Keypad autolock period > User defined**.



You can also set a lock code to restrict access to the contents of your device. The default lock code is 12345. To unlock, press the Left selection key , enter your lock code and press the center Navigation key .

**Tip:** You can make emergency calls (such as 911 in the United States) on a locked phone. A locked phone still lets you answer incoming calls.

### Change Your Ringer and Earpiece Volume

To **change the other caller's voice volume**, press volume up/down during a phone call.

**Note:** Bluetooth accessories, such as headsets, have their own volume controls.

To **change your ringer and sound profile** in Idle mode, press the Power key  once, then scroll to a profile, such as **Normal**, **Silent** or **Vibrate**, and press the center Navigation key .

To **change the sound for alerts or other events**, select **Home > Settings > Config. > General > Personalization > Tones**. Highlight the event and select the sound you want to associate with it.



**Tip:** To silence your device when it's ringing, just press the side volume keys.




## Learn to Navigate & Type


Home Screen



Menu Screen



- 1 Press the Home key  to open the main menu.
- 2 Press the Navigation key up, down, left or right  to highlight a menu feature.
- 3 Press the center Navigation key  to select the highlighted feature.



**Tip:** Press the Right selection key to go back one menu. Press the End key  to exit any menu feature without saving any changes.





**Tip:** If you need help while using your phone, visit [att.com/tutorials](http://att.com/tutorials).

To enter text (such as in a new text message):  
A flashing cursor indicates the insertion point.

Press the Shift key  to switch between character cases.

To insert digits or characters printed at the top of keys (such as \* or &), hold the Function key  while pressing the corresponding key. To enter only the characters printed at the top of keys, press the Function key  twice quickly.


To **delete** characters, press the Backspace key . Hold  to keep deleting. To start a **new line**, press the Return key (icon).



**Tip:** To copy text, press and hold the shift key and scroll to highlight the text you wish to copy. Then, select **Options > Editing options > Copy**. To paste the text, move to the correct place, and select **Options > Editing options > Paste**.




**Tip:** For international characters and other symbols, press the Chr key **Chr**.


As you enter letters, your Nokia E71x can attempt to **predict** the word. To turn on predictive text, select **Menu > Settings > Config. > General > Personalization > Language > Predictive text > On**.

If the word you are writing is not in the device's dictionary, the device suggests a possible word, while the word you were writing is displayed above the suggested word. Press the right Navigation key  to select the suggested word, or scroll up to select your word and add it to the dictionary. You can also scroll down to see a list of suggested words.


### Connect to AT&T


To connect to the wireless network successfully, your Nokia E71x must be powered on, your wireless service must be active, and you must be in a coverage area. The coverage indicator is located in the top left corner of your idle screen.



-  Full coverage
-  No coverage
-  Wireless is turned off







**Tip:** To turn off wireless coverage (such as on an airplane), activate the **Offline profile** by holding the Power key  and selecting **Offline**.

### Make Phone Calls

In Idle mode, enter a phone number and press the Call key  to make a call.

To **voice dial**, press and hold the Right selection key . When Speak now is displayed, speak the voice command clearly.

When your device rings and/or vibrates, press the Call key  to answer. To end a call, press the End key .


- To decline a call, press the End key , or select **Options > Decline**.
- To put a call on hold, press the Call key  during the call. To take the call off hold, press  again.
- To answer a second call and put the current call on hold, press the Call key . Then press  to switch between the two calls. To create a three-way conference call, press **Options > Conference**.
- To activate the speakerphone, press the volume keys and select **Loudspeaker** during a call. At the top of your display,  indicates the speaker is on. The speaker won't work when a car kit or headset is connected.



### Set Up Voicemail

1. Press and hold **1** to call the voicemail system.
2. Create your password.
3. Record your name.
4. Record a greeting.

### Check Voicemail


When you see the voicemail indicator  at the top of your display, press and hold **1** to check your voicemail.

To check your voicemail **from another phone**, call your 10-digit phone number. During your voicemail greeting, press **\*** then follow the voice prompts.

### Browse the Web on MEdia™ Net

With MEdia Net, you can get the information that is important to you at a glance. Your local weather, your teams scores, your movie theaters are all just a few clicks away.

To access MEdia Net:

1. In Idle mode, press the Home key , then select **MEdia Net**.
2. Highlight the content you want to view for:
  - Weather
  - News
  - Sports and more



To personalize your MEdia Net home screen:

1. From the MEdia Net home screen, select **Customize MEdia Net**.
2. Select **Edit Categories**.
3. Select the categories you would like to appear on your Media Net home screen and select **Save**.



## WLAN

Surf the Internet at high speed by connecting to a wireless network. The WLAN/Wi-Fi wizard displays nearby Wi-Fi networks. Depending on the network's status you can start web browsing immediately using the connection, as well as disconnect from a WLAN, search for WLANs, or turn network scanning on and off.


1. Press the Home key  to bring up the Main Menu.
2. Select **Settings > WLAN Wiz.** to activate the connection manager.
3. Choose an available wireless network and press the center Navigation key  to select. If the network requires a password, you will be prompted to enter one.
4. Select **Start web browsing** to activate the browser.




## Downloadable Fun

Personalize your phone with downloadable games, graphics and ringtones. AT&T gives you access to the latest games and graphics right on your phone and access to the best new ringtones from today's hottest artists.

To access AT&T Mall:

1. In Idle mode, press the Home key .
2. Select **Media Mall**.
3. Select **Ringtones, Games, Color Graphics, Answer Tones, Multimedia Store** or **MEdia Net Home**.
4. When your web connection is established, select a category.

To access new games and tools:


1. From the idle mode, press the Home key .
2. Select **Games and Apps**.
3. Select the game you would like to play or the application you would like to launch.



### Text & MMS Messages




In addition to email, you can send and receive text (SMS) and multimedia (MMS) messages.

### Send Text and Multimedia Messages

1. Press the Messaging key .
2. Select **New message > Message**.
3. Enter the contact telephone number.
4. Compose your message, then select **Options > Send** to send it.

### Read Text and MMS Messages



When you receive a message your phone plays an alert and shows New Message with a message indicator @.

1. In Idle mode, press the Messaging key .
2. Select Inbox.
3. Press the Navigation key  to select a message. Press the center Navigation key  to open it.

### Instant Messaging

If you subscribe to an instant messaging service such as Yahoo! Messenger, AIM® or Windows® Live Messenger, you can take the convenience and fun of instant messaging on the go with your mobile device.

### Sign In

1. Press the Messaging key .
2. Select **Instant Messaging**.
3. Choose your service and enter your user name and password. To start a conversation, highlight a contact and press the center Navigation key .
4. Enter text and select **Send**.



**Tip:** In the message area of an MMS message, you can select **Options > Insert content** and select an item to insert.

When you are signed in but not in a conversation, select **Options** to manage your contacts or groups, change your status or sign out. To conserve battery life, be sure to sign off IM when not in use.

### Add a Contact








1. On the IM main screen, select **Options > Add a Contact**.
2. Enter the contact's ID and press **Add**.

### Personal Email


With Xpress Mail, you can quickly and easily access your personal email accounts, including Yahoo!®, AOL® and Windows Live™ Mail. Xpress Mail synchronizes your phone with your email account, so changes and deletions appear both on your device and online. Automated setup works with the majority of email services.

**Note:** For functions such as web browsing and email, AT&T recommends that you subscribe to an unlimited data plan. Call AT&T at 611 to sign up.

### Set Up Xpress Mail

1. In Idle mode, press the Home key , then select **Messaging > Set Up Email**.
2. Press the Left selection key  to start, then select **Get Xpress Mail**.
3. Select **OK** to download.
4. Press the Left selection key  to install Xpress Mail.
5. Press the Left selection key  to **Continue** the installation.
6. Press the Left selection key  to accept the license agreement.
7. Enter your 10-digit telephone number (numbers only), then press **Options** on the Left selection key  and select **Next**.
8. Select **Internet "MEdiaNet"**.
9. Select your email provider and press **OK**. Press **Accept** on the Left selection key  to agree to Terms of Use. (If your provider is not listed, highlight More then press Next to view an additional list of personal email providers.)



10. Enter your User Name and Password, then press **Select** on the Left selection key  and select Done.

11. After successfully registering, your email accounts appear in Messages.

**Note:** Using email on your device requires a data plan.

### Using Xpress Mail

Press the Home key , then select **Messaging > Messages**. From your email inbox, you can:



- Synchronize your email.
- Compose a new email.
- Send and receive messages, or use the quick preloaded templates.




### Set Up Corporate Email

Access your corporate email, calendar and contacts from your device using Mail for Exchange™. The Setup Wizard offers quick activation for your Microsoft Exchange Server account; you may need to contact your network administrator for details to complete setup.

**Note:** Before launching the Setup Wizard, you need the server name, domain name, username, password and access point information.

1. In Idle mode, press the Home key , then select **Messaging > Set Up Email**.
2. Press the Left selection key  to start, then choose **Mail for Exchange**.



3. Select **OK** to begin setup.
  4. Enter the **domain, server name, user name** and **password**.
  5. Press the Left selection key  to select **Yes** to install **Mail for Exchange**.
  6. Select **Continue**, then select **Continue** again. You may need to connect to a WLAN network.
  7. If you do not have a Mail for Exchange profile, select **Yes** to create one and complete the setup process.
  8. Before completing the Setup process you will be prompted to change the phone's lock code.
- NOTE:** The default lock code is 12345.
9. After successfully registering, your email accounts appear in **Messages**.

### Using Mail for Exchange

Press the Home key , then select **Messaging > Messages**.

- To open an email message, select the message.
- To view email attachments, with the email open select **Options > Attachments**. Supported formats include PDF, DOC and XLS.
- To delete an email message, select **Options > Delete**. To cancel the deletion of an email from both the phone and remote mailbox server, open an email that has been marked to be deleted during the next connection, and select **OK** to cancel.
- To synchronize your device with the remote mailbox, select **Options > Sync E-mail**.

### Send and Receive Email

After you set up your email, you can create and send an email just like on your computer. When you receive messages, @ appears at the top of your idle screen.

1. Press the Messaging key .
2. Select **New message > E-mail**.
3. Compose your message, then select **Options > Send** to send it.

### Transfer Music and Other Files From Your Computer

You will need:



- A computer with media files, and a program that manages them. Your device plays AAC, AAC+, AMR-WB, WAV, MP3 and WMA 9 files. For more details, visit [att.com/music](http://att.com/music).
  - A microSD card (sold separately)
  - A compatible USB data cable or an active Bluetooth connection
  - A compatible version of Nokia PC Suite (included in box)
1. Load music to your compatible PC using your preferred software, such as Windows Media Player®, Napster® or Yahoo! Music® client.
  2. On your device, open the microSD card slot and insert the memory card (sold separately).
  3. Connect the phone to your compatible PC with a microUSB cable.
  4. On the dialog box that displays on your computer, select your preferred music software.

5. Transfer the songs from the compatible computer's library to your device.
6. After your files transfer successfully, disconnect the microUSB cable.

You can also transfer music using Bluetooth technology. Please refer to the User Guide for more information on loading music to your device.





When using the features of this device, obey all laws and respect the privacy and legitimate rights of others.

### Take a Photo and Send It

1. Press the Right selection key  to open the camera.
2. Point the camera lens at the photo subject.
3. Press the center Navigation key  to take a photo.
4. Your device saves the picture and shows it onscreen. To see stored pictures, press **Menu > My Stuff > Images**.
  - To send a photo in a multimedia message, press **Options > Send > Via message**.
  - To edit the picture, select **Options > Edit**.
  - To view picture properties, select **Options > View details**.



## Record a Video Clip


1. Press the Right selection key  to open the camera.
2. Press the Left selection key to bring up the camera menu screen.
3. Press up on the Navigation key  to select **Switch to video mode**.
4. Press the center Navigation key  to begin recording a video.
5. Press the center Navigation key  to stop recording and save the video, or press **Pause** to pause recording. To continue a paused recording, press **Continue**.



## Picture and Video Options

In the photo or video viewfinder press **Options > Settings** to open the settings menu. You can change settings such as image quality, extended digital zoom and the capture tone.


## Play a Video Clip

1. Press the Home key , then select **My Stuff > Video clips**.
2. Scroll to a video clip.
3. Press the center Navigation key  to play.

## Video Share™

Share events the moment they happen. Video Share lets you stream live video directly to friends and family.

To make a Video Share call:

1. Dial the 10-digit number of another 3G Video Share capable device.
2. Once the call is answered and **Video Share ready** appears, press the center Navigation key  to initiate the Video Share session.

**Note:** To switch to full screen mode and back, select **Options > Play in full screen/ Play in normal screen**.

To accept a Video Share\* call:

1. When receiving a Video Share call, the name or number of the person who wants to share video with you will appear on your screen.
2. Select Accept and the Video Share session will begin automatically.



To end a Video Share session and continue with the phone call, press the stop icon.

\* Video Share is not available in all markets. Both parties must be in a 3G service area – a 3G icon must appear by the signal bars prior to a call being placed, and both parties must remain in the 3G coverage area for the duration of the Video Share session.

### AT&T Mobile Music

AT&T Mobile Music provides the ultimate music experience. Just select AT&T Music from the main menu to listen to your favorite music, watch the latest music videos, and stay in the know with music news and more.




To access AT&T Mobile Music, press the Home key  then select AT&T Music.



- Browse and select music from leading digital music stores like Napster®, eMusic™ and Yahoo! Music™ with **Shop Music**.
- Listen to your music on an integrated **Music Player**.
- Enjoy dozens of commercial-free music stations with **XM Radio**.
- Watch the latest music videos under **Music Videos**.
- Personalize with ringtones and Answer Tones™ under **Shop Music**.
- Instantly ID the title and artist of a song with **MusicID** and purchase it through Napster®.

## Music Player

Listen to music from your favorite artists right on your device. To listen to music that you have transferred to your device, follow these quick steps.


1. Press the Home key .
2. Select **AT&T Music > Music Player**.
3. Use the Navigation key  to select a category from the list.
4. Press the center Navigation key  to play/pause.

Use the left or right Navigation key  to go to the previous or next song.  
Use the volume keys on the right side of the phone to control the volume.

## CV-Video

CV-Video brings your phone to life. Watch news, sports, weather and entertainment clips while on the go.

To access CV-Video:

1. In idle mode, press the Home key  and select **CV-Video**.
2. Once connected, select the **video categories** you want to view.
3. Select the clip you want to play.

To personalize your CV-Video content:

1. From the CV-Video home screen, select **Customize CV**.
2. Select **Edit My Favorites**.
3. Select the content you would like to display on your CV-Video Home screen.


Parental Controls available. See box insert for details.

CV-Video requires a Data Plan for Phones plan.



## AT&T Navigator

AT&T Navigator, with GPS enabled directions, is the fastest way to get to where you are going – whether it's across town or across the country.

1. From Idle mode, press the Home key , then select **AT&T GPS > AT&T Nav.**
2. Enter your phone number.
3. Scroll down and select **Login.**
4. Read the Message on your phone's screen and select **Agree** to continue.
5. Select **Drive To, Search, Maps & Traffic** or **Tools & Extras.**













## Navigator Options

- **Drive To** – select a destination.
- **Search** – find a location.
- **Maps & Traffic** – get traffic information.
- **Tool & Extras** – learn about Navigator and set your preferences.

For more information visit [att.com/navigator](http://att.com/navigator).



To...	Do this...
<b>Lock keypad</b>	Press the Left selection key  then the function key  .
<b>Voice commands</b>	To activate voice commands, press and hold the Voice Commands key  . The first time it is activated, a tutorial will appear.
<b>Open quick list</b>	Press and hold the Power key  to quickly access your sound profiles and device lock.
<b>Play music or games on an airplane</b>	Press and hold the Power key  and select <b>Offline</b> .
<b>Personalize your device</b>	Select <b>Menu &gt; Settings &gt; Config. &gt; General &gt; Personalization</b> .
<b>Multitask</b>	To switch among multiple open tasks, press and hold the Home key  .
<b>Access Menu</b>	From the idle screen, press the Left selection key  .

To...	Do this...
<b>Access Camera</b>	From the idle screen, press the Right selection key  .
<b>Access Messaging, MEdia Net, AT&amp;T Navigator, Bluetooth, Profiles and the Clock</b>	Select the corresponding icon at the top of the Idle screen.
<b>Extend battery life</b>	Select <b>Menu &gt; Settings &gt; Config. &gt; General &gt; Personalization</b> . From there, you can select <b>Display</b> to adjust the Power Saver time-out and Light time-out settings. Select <b>Keypad lights</b> to change the Notification time-out settings.
<b>Close open applications not in use</b>	Running multiple applications at once affects battery life. To see a list of open applications, press and hold the Home key  . To close an application, scroll to the application, press the Backspace key  and select <b>yes</b> .

If you have questions or need assistance, we're here to help.

### **AT&T Support:**

Go to [att.com/support](http://att.com/support), where you can select from a number of customer care options. You can also contact the AT&T Customer Support Center at 611 on your cell phone.


Additional charges may apply. Visit [att.com](http://att.com) for more details. Phone features subject to change without prior notice. All phone screens are simulated. Services may not be available in all markets.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider. © 2009 AT&T Intellectual Property. All rights reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property. Nokia, E71x and the S60 logo are trademarks or registered trademarks of Nokia Corporation.

Product color may vary. Printed in XXXX. 9212047 Ver. 1.0 1/09


### Keys and parts

1. Earpiece
2. Light sensor
3. Navigation key
4. Left selection key
5. Call key
6. Microphone
7. Charger connector
8. Power key
9. Right selection key
10. End key
11. Backspace key
12. Enter key

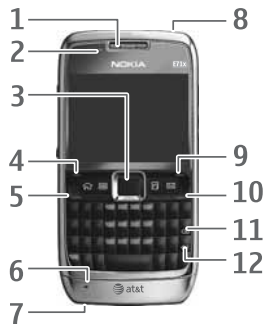

### One touch keys

1. Home key
2. Contacts key
3. Calendar key
4. Messaging key

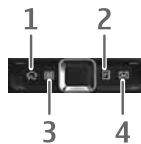

### Fun/Shft/Chr

1. Function key. To insert digits or characters printed at the top of keys, press and hold the function key, and press the corresponding key. To enter only the characters printed at the top of keys, press the function key twice quickly.
2. Shift key. To switch between the different character cases, press the shift key.
3. Chr key. When writing text, press the chr key to insert characters not shown on the keypad.



### Side

1. Universal headset connector
2. Volume key
3. Voice commands key
4. Volume key
5. Infrared
6. microSD card slot
7. Micro USB connector

