


Nokia E71x

- Personal and Corporate email
- Wi-Fi
- AT&T Navigator
- Video Share calling
- Instant messaging
- Browse the Internet
- 3.2 MP camera
- CV

PERSONAL EMAIL

Install XpressMail

1. In idle mode, press the Envelope key (✉) to access the Messaging menu.
2. Scroll to and select **Set up e-mail > Start** to begin setup.
3. Select **Get XpressMail > Download Now > OK > Yes** to install XpressMail.
4. Select **OK**.
5. Enter your phone number and select **Options > Next**.
6. Choose an Internet connection and select an email provider.
7. Read the disclaimer and select **Accept**.
8. Enter your username and select **OK**.
9. Enter your password and select **OK**.
10. Select **Options > Done**.

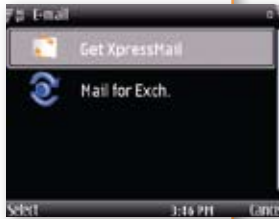

Tip! To access your new email account, press the Envelope key. (✉)

WI-FI

Connect to a Wi-Fi network

1. In idle mode, press the Home key (🏠) to access the Menu.
2. Scroll to and select **Settings > WLAN wiz..**
3. Select a network.
4. Select **Start web browsing**.
5. Enter the pre-shared key for the WLAN network.
6. Select **OK** to connect to the web.



CORPORATE EMAIL

Set up your corporate email

1. In idle mode, press the Envelope key (✉) to access the Messaging menu.
2. Scroll to and select **Set up e-mail > Start** to begin setup.
3. Scroll to and select **Mail for Exch..**
4. Enter your email address and select **OK**.
5. Enter your password and select **OK**.
6. Enter your user name and select **OK**.
7. Enter the domain name for your email account, then select **OK**.
8. Select **Options > Open > Yes** to install Mail for Exchange.
9. Select **Continue > Continue** to complete installation.



Tip! The default password for this device is 12345. Your office network administrator can provide the information you need to finish setup (e.g., domain name and Mail for Exchange server name). To access your new email account, press the Envelope key. (✉)

AT&T NAVIGATOR

Get directions with AT&T Navigator

1. In idle mode, press the Home key (🏠) to access the Menu.
2. Scroll to and select **AT&T GPS > AT&T Nav..**
3. Enter your 10 digit phone number and select **Go** to continue setup.
4. When setup is complete, select **Drive To > Address**.
5. Select **OK** to accept the tip.
6. Select **Type It** to enter your location.
7. Select **OK** to accept the tip.
8. Enter the street address.
9. Enter the city name and select **Go**.



Tip! **ACTIVE IDLE**
You can change the list of applications you can access from the idle screen. Press the Home key (🏠) and select **Settings > Config > General > Personalization > Idle screen mode > Shortcuts**. Change the shortcuts to meet your needs.



Tip! To learn more about the Nokia E71x, check out: att.com/WirelessTutorials. Select Manufacturer "Nokia" and Model "E71x".



Nokia E71x

VIDEO SHARE CALLING*

Make a call using Video Share

1. In idle mode, dial the 10-digit number of another 3G Video Share capable device*.
2. Once "Video Share Ready" displays on your device, select **Video Share** to begin the Video Share session.
3. To end a Video Share session and continue with the phone call, select **Stop**.
4. To set Video Share options, select **Options**.
5. Select **Video Share**.



* Video sharing is not available in all markets. Video Share requires both parties have Video Share capable handsets, have the feature provisioned on their service and remain in 3G coverage areas for the duration of the Video Share session. A 3G icon must appear by the signal bars prior to a call being placed.

INSTANT MESSAGING

Sign in to Instant messaging


1. In idle mode, press the Envelope key (✉) to access the Messaging menu.
2. Scroll to and select **Instant messaging**.
3. Choose your Instant messaging service.
4. Enter your screen name and password.
5. Select **Sign in**.



BROWSE THE INTERNET

Launch MEdia Net

1. In idle mode, press the Home key (🏠) to access the Menu.
2. Scroll to and select **MEdia Net**.
3. Choose from **My Links**, **What's Hot!** and more from the MEdia Net homepage.

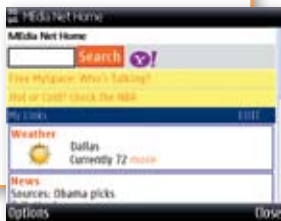

Light sensor

Navi™ key

Home key

Calendar key

Function key

Shift key

Mirror for self portraits

Flash

Main camera

Selection keys

Envelope key

Address Book key

Character key



Power key




Headset jack

Voice key



Volume keys

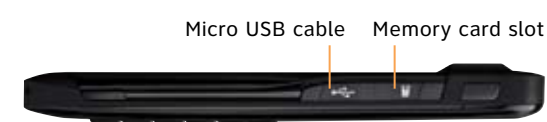

Micro USB cable

Memory card slot

SPECIFICATIONS

- Network:** Quad band GSM/EDGE 850/900/1800/1900
Dual band UMTS 850/1900
- Talk Time:** Up to 4.5 hours
- Standby Time:** Up to 12.5 days
- Dimensions:** 4.45" (H) x 2.25" (W) x 0.39" (D)
- Weight:** 4.44 oz.

Visit att.com/DeviceSupport for more information.

Talk and standby times are estimates and vary based on many factors. For complete information refer to www.nokiausa.com.

3.2 MEGAPIXEL CAMERA

Take a picture

1. In idle mode, press the Right Selection key to access the camera.
2. Press up and down on the Scroll key to zoom in or out.
3. Press the Center Selection key to take a picture.



CV

Access Cellular Video (CV)

1. In idle mode, press the Home key (🏠) to access the Menu.
2. Scroll to and select **Cellular Video**.
3. Scroll to and select a video to play.

