

Tips and Tricks for your Nokia E71x

Email Elegance



NOKIA
Connecting People



1. Power key

Press and hold to turn the phone on or off or press briefly to access device profiles.

2. Home key

Press once to access the Menu.
Press and hold to access open applications.

3. Calendar key

Press once to access your Calendar.

4. Navi™ key

The Navi key will blink when you receive a message or miss a call.

5. Address Book key

Press once to access your Address Book.

6. Envelope key

Press once to access the Messaging menu.

7. End key

Press to end a call or to ignore an incoming call and send it to voicemail.


8. + and – keys

In the browser or on maps in AT&T Navigator, press + to zoom in and - to zoom out.

9. # key

From the idle screen, press and hold the # key to switch between the silent and normal profiles.


10. Function key

Press and hold  and # to switch the device to the Vibrate profile.

11. Chr key


In a text message, press to reveal special symbols.

AT&T Navigator

Access Press  and select **AT&T GPS > AT&T Nav.**

Pre-plan Visit www.att.com/navigator and get driving directions in advance, search for businesses and more.

Sync new addresses Click **Refresh** in Favorites or Recent Places to sync in any new addresses to your device.

Use voice entry You can search for a business using voice entry. To ensure that the entire address is recorded correctly, press the Talk key . Before speaking, wait for the beep to sound and “Now Recording” to display on the screen.

Search Use the “Most Popular” category search to find businesses with higher user ratings.

Access AT&T Navigator customer support To access Customer Support, from the main AT&T Navigator menu, select **Tools & Extras > About > Support Info.**

Easily access your personal and corporate email accounts

Enter messages quickly with the QWERTY keyboard

Keep in touch with text messages and IM

Take great pictures with the 3.2 megapixel camera

Get direction to popular locations and other destinations.



All screen images are simulated. © 2009 Nokia. Nokia, Nokia Connecting People and Nokia E71x are registered trademarks of Nokia Corporation. Other company and product names may be trademarks or trade names of their respective owners. Wireless service is required to use many features. Some networks have limitations that affect how you can use this device. © 2009 AT&T Intellectual Property. All rights reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. N5795

Phone

Dial from the Address Book Press and enter the first initial in the search bar.

Speed dial Press and select **Settings > Speed dial**. Once set, from the idle screen, press and hold the assigned speed dial key.

Access voicemail Press and hold the 1 key.

Add photo to contact Press and select **My stuff > Images**. Choose an image and select **Options > Use image > Assign to contact** and select the contact.

Make a Video Share¹ call Make a call. If Video Share is available, "Video Share Ready" displays on your device. Select **Options > Video Share**.

IM

Sign in Press and select **Instant messaging**. Choose your service, enter your screen name and password and select **Sign in**.

Send IM From the Messenger screen, select a contact, enter your message and select **Send**.

1. Video sharing is not available in all markets. Video Share requires both parties have Video Share capable handsets, have the feature provisioned on their service and remain in 3G coverage areas for the duration of the Video Share session. A 3G icon must appear by the signal bars prior to a call being placed.

Email

Set up corporate Press and select **Set up e-mail > Start > Mail for Exch..** Enter your email address, password, user name, domain name and Mail for Exchange server name then select **Options > Open > Yes > Continue > Continue**.

Set up personal Press and select **Set up e-mail > Start > Get XpressMail > Download Now > OK > Yes > Continue > OK**. Follow the installation prompts and select **Options > Done**.

Access Attach a file Press and select email account. After you compose the email, select **Insert**. Then select the file you want to attach.

Connectivity

Set up Wi-Fi Press and select **Settings > WLAN wiz..** Choose a network and select **Start web browsing**. Enter the pre-shared key and select **OK**.

Browse the web Press and select **MEdia Net**.

CV Press and select **Cellular Video**.